



**SCHLEIFENBAUER**

*LIVING FOR THE POWER TO DELIVER*

## V2.44 Schleifenbauer PDU User manual



# Index

<b>Lay out of this manual</b>	<b>3</b>		
<b>What's new</b>	<b>3</b>		
<b>How to? ....taking a shortcut</b>	<b>4</b>		
<b>Introduction</b>	<b>5</b>		
Power distribution meets intelligence	5		
Interfaces	5		
Accessories	5		
<UC> Colored housing	6		
Measurements	6		
<b>Part I - Installation of hardware</b>	<b>7</b>		
Safety warnings	7		
Expert personnel	7		
Technical installation requirements	7		
Visual inspection	7		
Testing	8		
Cleaning	8		
Contents of the package	8		
Additionally needed tools	8		
Mounting the PDU in cabinets	8		
How to mount a PDU horizontally (19 inch)?	8		
How to mount a PDU vertically (= 0U)?	9		
How to install on a flat surface?...table top mount	9		
How to prevent hot spots in a cabinet? ...sunken installation	9		
How to mount a PDU without tools?	9		
How to achieve maximum mounting flexibility? ...mounting with profile clamps	9		
Cabling the PDU: ethernet, data bus and sensors	10		
How to connect the PDU to LAN?	10		
How to connect a data bus?	10		
How to connect sensors to a PDU?	10		
How to connect a NO/NC contact?	11		
<b>Part II - User manual</b>	<b>12</b>		
How to maintain a PDU?	12		
How to be sure the status of switchable outlets will not change during firmware upgrade or restarting of the controller?	12		
Life-Supporting Policy	12		
<b>Part IIA - Locally monitoring: device display</b>	<b>13</b>		
How to change settings locally via PDU display?	13		
How to stop a blinking display? ... local alert reset	14		
Why do alerts occur?	14		
How to check the load balance, the temperature / humidity or the status of the NO/NC contact?	14		
How to get back to the first display?	14		
How to check an outlet status locally?	15		
How to check input and/or outlet measurements?	15		
How to read measurements of optional sensors and what options are possible?	15		
Option 1: load page	15		
Option 2: sensor pages	16		
How to read Branch Residual Current measurements?	16		
Residual Current Monitoring vs Residual Current Devices?	17		
Where to measure residual current?	17		
How to find unit address, tag, name or location of the PDU?	17		
How to check the way the PDU is connected to the LAN?	17		
How can I check in which mode and with what protocol the PDU is running?	18		
How to check the installed firmware version?	18		
How to check for traceability information ?	18		
<b>Part IIB - Remote operating and monitoring: Web interface</b>	<b>19</b>		
Introduction	19		
How to enlarge a pane in L sized screens?	20		
How to select English or German language?	20		
How to change and save settings in the web interface?	20		
Dashboard – tab	21		
System status	21		
Load	23		
Interfaces	23		
Sensors – tab	24		
Inputs – tab	25		
Outlets – tab	26		
System – tab	28		
Identification	29		
Configuration	30		
Reset	30		
Settings	31		
Interfaces – tab	34		
<b>Part III - Administrator manual</b>	<b>35</b>		
Specific manuals	35		
How to change SNMPv3 settings?	36		
How to use the 'connected devices' section in the web interface?	37		
How about login profiles, usernames and passwords?	37		
How to change factory passwords?	38		
How to change the Ethernet link settings?	38		
Network configurations	39		
DHCP and default address	39		
How to configure the IP settings manually?	39		
How to setup IPv6?	40		
IPv6 Autoconfigure (SLAAC)	40		
Static IP	40		
How to configure IPv6?	40		
How to set up IPv6 address filtering?	41		
How to send SNMP Traps with IPv6?	42		
Firmware downgrade / upgrade	42		
How to stop the alert signaling? ...auto reset alert	43		
How to upgrade the firmware? ...using SPST	43		
Schleifenbauer data bus: what is it?	44		
How to prevent data losses because of cable cuts? ...ring redundancy	45		
How to make a data bus using Schleifenbauer Gateway?	46		
How to connect the data bus to LAN without a Gateway? ...using a PDU!	47		
<b>PART IV - Problem Solving</b>	<b>48</b>		
How to perform a "Software reset"? And why?	48		
Remotely	48		
Locally	48		
How to perform a "Factory reset"?	48		
How to reset peak current?.....and other dips or peaks	49		
<b>Recycling</b>	<b>50</b>		
<b>PRODUCT SPECIFICATIONS</b>	<b>50</b>		
<b>SERVICE AND SUPPORT</b>	<b>50</b>		

# LAY OUT OF THIS MANUAL

This manual is split in three sections. You can focus on the section that fulfills your need when installing, operating and/or managing the PDU.

The “How to....” section is meant to guide you directly to a solution for a problem you are faced with. It is not necessary to read the complete manual.

Part I	<a href="#"><u>Installation manual</u></a>	Prepare PDU for use: <ul style="list-style-type: none"><li>• safety issues</li><li>• mounting the PDU</li><li>• cabling the PDU</li></ul>
Part II	<a href="#"><u>User manual</u></a>	Operator and user part: <ul style="list-style-type: none"><li>• operating/read out via the PDU-display</li><li>• operating/read out via the webinterface</li><li>• problem solving</li></ul>
Part III	<a href="#"><u>Administrator manual</u></a>	Admin part: <ul style="list-style-type: none"><li>• configure via the webinterface</li><li>• set up via the webinterface</li><li>• problem solving</li></ul>
Part IV	<a href="#"><u>Problem Solving</u></a>	In this chapter you can find the frequently asked questions (FAQs)

## WHAT'S NEW

- In the webinterface and manual the term “output” was used as in output from a channel. This was confusing so we changed it to “outlet” where a physical outlet was meant.
- IPv6 support
- Firmware and mass configuration using SPST
- Part IV Problem Solving

# How to? ....*TAKING A SHORTCUT*

The “How to....” section is meant to guide you directly to a solution for a problem you are faced with. It is not necessary to read the complete manual.



Please read the “Safety Warnings” and “Expert Personnel” sections first !

<b>Part I - Installation of hardware</b>	<b>7</b>		
How to mount a PDU horizontally (19 inch)?	8		
How to mount a PDU vertically (= 0U)?	9		
How to install on a flat surface?...table top mount	9		
How to prevent hot spots in a cabinet? ...sunken installation	9		
How to mount a PDU without tools?	9		
How to achieve maximum mounting flexibility? ...mounting with profile clamps	9		
How to connect the PDU to LAN?	10		
How to connect a data bus?	10		
How to connect sensors to a PDU?	10		
How to connect a NO/NC contact?	11		
<b>Part II - User manual</b>	<b>12</b>		
How to maintain a PDU?	12		
How to be sure the status of switchable outlets will not change during firmware upgrade or restarting of the controller?	12		
<b>Part IIA - Locally monitoring: device display</b>	<b>13</b>		
How to change settings locally via PDU display?	13		
How to stop a blinking display? ... local alert reset	14		
How to check the load balance, the temperature / humidity or the status of the NO/NC contact?	14		
How to get back to the first display?	14		
How to check an outlet status locally?	15		
How to check input and/or outlet measurements?	15		
How to read measurements of optional sensors and what options are possible?	15		
How to read Branch Residual Current measurements?	16		
How to find unit address, tag, name or location of the PDU?	17		
How to check the way the PDU is connected to the LAN?	17		
How can I check in which mode and with what protocol the PDU is running?	18		
How to check the installed firmware version?	18		
How to check for traceability information ?	18		
<b>Part IIB - Remote operating and monitoring: Web interface</b>	<b>19</b>		
How to enlarge a pane in L sized screens?	20		
How to select English or German language?	20		
How to change and save settings in the web interface?	20		
<b>Part III - Administrator manual</b>	<b>35</b>		
How to change SNMPv3 settings?	36		
How to use the ‘connected devices’ section in the web interface?	37		
How about login profiles, usernames and passwords?	37		
How to change factory passwords?	38		
How to change the Ethernet link settings?	38		
How to configure the IP settings manually?	39		
How to setup IPv6?	40		
How to configure IPv6?	40		
How to set up IPv6 address filtering?	41		
How to send SNMP Traps with IPv6?	42		
How to stop the alert signaling? ...auto reset alert	43		
How to upgrade the firmware? ...using SPST	43		
How to prevent data losses because of cable cuts? ...ring redundancy	45		
How to make a data bus using Schleifenbauer Gateway?	46		
How to connect the data bus to LAN without a Gateway? ...using a PDU!	47		
<b>PART IV - Problem Solving</b>	<b>48</b>		
How to perform a “Software reset”? And why?	48		
Remotely	48		
Locally	48		
How to perform a “Factory reset”?	48		
How to reset peak current?.....and other dips or peaks	49		

# INTRODUCTION

## **POWER DISTRIBUTION MEETS INTELLIGENCE**

The Schleifenbauer Intelligent Power Distribution Unit (PDU) is designed to distribute power for many years and without problems. It is equipped with a Schleifenbauer data bus which makes it possible to read and manage many PDUs with a single IP address. An ethernet port was added to the individual PDU's so that alongside the advantages of a data bus, a whole range of new options has become available.

Schleifenbauer PDUs bring together or merges the interests between IT and infrastructures, making it a real bridge builder.

The PDU may contain:

- metered outlets
- switched outlets
- metered and switched outlets
- passive outlets

Monitoring capabilities will be described in detail within this manual in coming sections.

## **INTERFACES**

In the Admin part of this manual you will find information about the "Interfaces" with which we mean the technology to communicate via your LAN with the Schleifenbauer data bus. There are several possibilities:

- (embedded) web interface
- Modbus/TCP
- SNMP (Simple Network Management Protocol)
- (SP)API (Schleifenbauer Products Application Programming Interface)

## **ACCESSORIES**

The following accessories can be purchased from Schleifenbauer, additionally. Please check the [Installation Section](#) for more details regarding mounting brackets.

- C14/C20 plugs if C13/C19 outputs are used
- Different types of attachment brackets
  - o 19" rack mounting brackets
  - o Tabletop mounting brackets
  - o Mounting plates for sunken installation
  - o Profile clamps
  - o Toolless Mounts
- Customer Specific solutions related tools

Please check [www.schleifenbauer.eu](http://www.schleifenbauer.eu) for further details regarding the accessories.

## <UC> COLORED HOUSING

< UC> groen is veranderd. Moet plaatje ook aangepast worden. Is namelijk leger groen geworden

Standard the housing color of the Schleifenbauer PDUs is black. It is also possible to anodizing the housing in 5 other colors.



- 01. black
- 02. green
- 03. orange
- 04. blue
- 05. red
- 06. Yellow

*Note: actual colors may vary!*

## MEASUREMENTS

Measurements of the input and the outlet level can be found below:

Measurement	Unit	Remark
Energy	(kWh)	total & sub-total
Voltage	(V)	with voltage dip registration
Current	(A)	with peak value registration
Power factor	(%)	
Apparent power	(VA)	
Real power	(W)	
Temperature	(°C)	with optional sensor
Relative humidity	(%)	with optional sensor
NO/NC contact	0 or 1	

# PART I - INSTALLATION OF HARDWARE

Please use the information in this chapter to inspect, install and connect the Schleifenbauer Intelligent PDU and all optional mentioned accessories.



The PDU must be installed in a restricted access location

Socket-outlet must be installed near the equipment

Socket-outlet must be easily accessible

Installation by expert personnel only

After installation: default passwords / RC4 keys MUST be changed (see: [Part III - Administrator manual](#))

## **SAFETY WARNINGS**

This manual contains important safety instructions that should be followed during installation and operation of the PDU. Please read this manual carefully since there may be serious or fatal personal injury and damage to the equipment if the safety instructions, warnings and directions are not followed. Please save this document for future use.

## **EXPERT PERSONNEL**

Installation, maintenance and inspection of the Schleifenbauer Intelligent PDU must be carried out by adequately trained persons according to NEN EN 50110-1, with full observance of the specifications of NEN EN 50110-1 and NEN 3140.

## **TECHNICAL INSTALLATION REQUIREMENTS**

Before installing and putting the system into operation, check whether the characteristics of the electrical system to which connection is to be made correspond to the product specifications.

- The Schleifenbauer Intelligent PDU has been designed for connection to electrical systems that comply with IEC 60364 or in the Netherlands, NEN 1010.
- The voltage, maximum permitted current and the number of phases must be correct. This information is displayed on the front side of the PDU.
- The maximum permitted power must be taken into account with regard to the maximum length and the diameter of the connecting lead.
- The values and characteristics of the in-series protective devices must match the PDU and the protective elements included in it.
- The environmental factors must correspond to the product specifications.

## **VISUAL INSPECTION**

After opening the cardboard box and removing the packaging material, the PDU should be checked visually. The PDU should not be put into operation if damage is detected such that safe and proper operation cannot be guaranteed. In such cases, please contact Schleifenbauer Products BV.

Note that, in the case of PDUs that are equipped with an over voltage protection, the overvoltage protection and the respective overcurrent protection (if applicable) must be inspected on a regular basis.

## **TESTING**

Each Schleifenbauer PDU is individually tested according to the NEN 3140 standard. Test reports are available on request.



For measurement of insulation resistance, the measuring voltage used must be lower than or equal to the voltage according to the product specification.

## **CLEANING**

The PDU may only be cleaned by wiping off the outside with a clean dry cloth.

## **CONTENTS OF THE PACKAGE**

The Schleifenbauer Intelligent PDUs are shipped in a GreenCart (rolling trolley) or are packaged in a cardboard box. Where applicable, dispose the packaging material in a responsible manner, in accordance with local regulations. All of the materials used for packaging can be recycled. Please contact Schleifenbauer Products BV to arrange return of your empty GreenCart. Immediately after receipt, check whether you have received all of the goods.

The following items are delivered for each PDU:

- fixing materials: these can be attached to the PDU (19" or table-mounting brackets), or are delivered separately if they have been ordered separately;
- the installation manual (1 per shipment);

Please note that the PDU User Manual can be found online at <http://schleifenbauer.eu>

## **ADDITIONALLY NEEDED TOOLS**

The following tools are needed to install the PDUs:

- cage-nuts with bolts and washers
- suitable screwdriver.

## **MOUNTING THE PDU IN CABINETS**

### ***How to mount a PDU horizontally (19 inch)?***

Each 19" rack bracket of a PDU has 4 holes for horizontal mounting in 19" racks. The holes are positioned so that an appropriate fixing hole is always available for a PDU with a profile height of 1.5 U. Using one or two of the 4 holes allows mounting without wasting space.





## ***How to mount a PDU vertically (= 0U)?***


In the case of a PDU for vertical mounting, the connection lead is fed through a hole in the upper, bottom or front face. There are 4 options for horizontal mounting:

## ***How to install on a flat surface?...table top mount***

Gives the profile possibility to be mounted to a flat surface (tabletop). This arrangement is used for:

- vertical mounting to the bracing beams in the 19" cabinet
- fixing to a mounting plate
- mounting between the 19" uprights: the profile attaches to the front of the uprights


The holes on the brackets are located as far as possible to the outside so that it can also fit and tighten the bolts if a swivel gland has been placed on the short side.

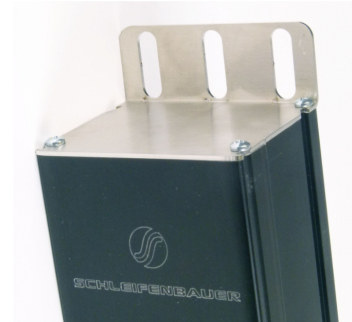

## ***How to prevent hot spots in a cabinet? ...sunken installation***

When power leads might block the flow of hot exhaust air, especially in case of a 600mm wide cabinet, it is necessary to create flow space. This can be done by using the “sunken installation brackets”. Because of the shape of the bracket, it is possible to ‘partially sink’ the profile into the cabinet and save space.

These mounting plates can be used for many different cabinets.

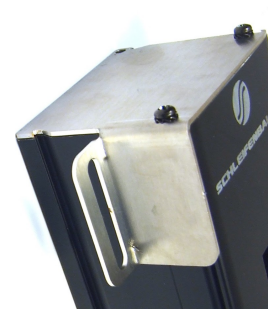


## ***How to mount a PDU without tools?***

Toolless mounting is created by making attachment points on the rear of the PDU housing. There is a wide range of cabinet brackets available, all in which you can hang the PDU without using tools.

Toolless Mounting can be done as single PDU or double PDUs (see photo).

Mounting brackets can be custom made by Schleifenbauer.

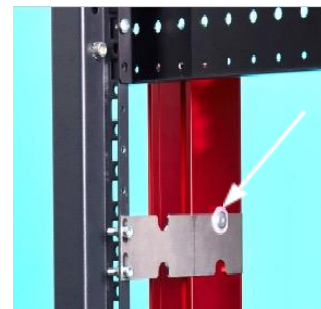

## ***How to achieve maximum mounting flexibility? ...mounting with profile clamps***

The clamps, made of spring steel, can be installed in the position of your choice. The clamp fits around the PDU profile and is secured with a fastening screw. Best is to use one clamp for every 50 cm of profile length.



## CABLING THE PDU: ETHERNET, DATA BUS AND SENSORS

### How to connect the PDU to LAN?

#### 10/100 Mbps LAN Ethernet port

Connecting the PDU to a Local Area Network (LAN) provides communication through an Ethernet network, if the PDU is connected exclusively, or simultaneously with the data bus.

The RJ45 connector for the network cable must be plugged into the Ethernet port:

- Connect the RJ45 Ethernet cable to the Ethernet port on the PDU and to the Ethernet connector on the LAN device; when connected, the orange LED – marked “lnk” - will blink



### How to connect a data bus?


There are three black communication ports. One is marked as sensorport, the other two as databus ports (in and out).

The left databus port is the “incoming” databus port. The right databus port is “outgoing”. This is especially important for devices in “bridge” mode; a MUST HAVE for devices in bridge mode. For devices in hybrid mode it is a NICE TO HAVE.

The serial data bus in the Schleifenbauer PDU uses CAT5 or (preferable) patch cables.



The terms IN and OUT are arguable. Data will be send and received by both ports but to close the data bus ring, it is necessary to follow the connection diagram. See it as the best way to daisy chain PDUs.

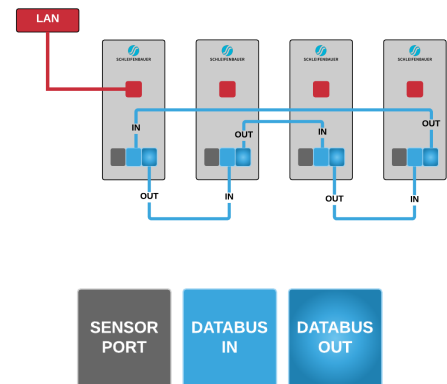

### How to connect sensors to a PDU?

The PDU has a RJ12 connector sensor port for connecting a digital temperature sensor, a combined sensor for temperature/humidity or a dry switch contact

#### Plug and play


The PDU registers which sensor is connected and automatically adapts the menu in the display to the sensor(s) that it has detected.



Use Schleifenbauer sensors only.

## How to connect a NO/NC contact?

The sensor port makes use of the RJ12 6P6C standard (= 6 position, 6 conductor). To connect a NO/NC contact on the PDU sensor port, you have to make use of pin 1 and pin 6 ; as shown in the figure below.

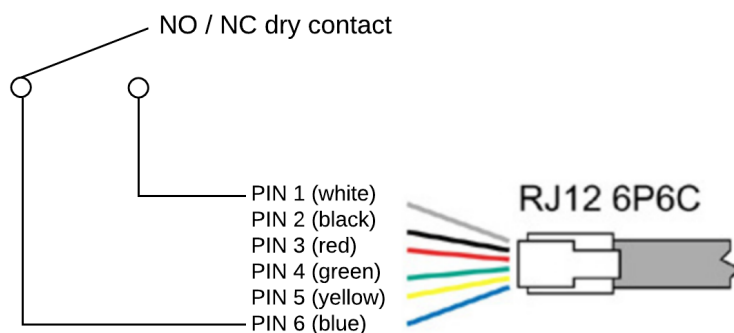

Note that on a PDU only 1 NO/NC contact can be connected.



Status of the contact will be displayed. It is not possible to send a command.

Classic PDUs (= without ethernet port) do not support a NO/NC contact

# PART II - USER MANUAL

## How to maintain a PDU?

### Internal maintenance is not an option

A Schleifenbauer Intelligent PDU **may not be opened by unauthorized persons**. In the event of malfunction or faults in the PDU, please refer to the warranty conditions. Schleifenbauer Products BV will not accept warranty claims if the PDU has been opened or alterations have been made.

- ⇒ Please pay attention to the operation conditions before installation and operation of the Schleifenbauer PDU.
- ⇒ The Schleifenbauer PDU has to be protected according to the valid installation guidelines.  
The rated value of the in-series protective device may not exceed the maximum value indicated on the product.
- ⇒ The Schleifenbauer PDU may not be used in: a humid environment, a seriously contaminated environment or outdoors.
- ⇒ The manufacturer's warranty on the Schleifenbauer PDU becomes invalid when the QC sticker on the side of the profile is broken.
- ⇒ Before turning on the PDU for the first time, make sure that it has been allowed to acclimatize to the ambient temperature for at least 24 hours. Major temperature fluctuations can lead to the formation of condensation in the PDU if this guideline is not followed.
- ⇒ Please keep in mind that maximum allowed temperature for a metal enclosure is 70 °C for installation in a normal location and 90 °C for installation in a restricted access location.

## How to be sure the status of switchable outlets will not change during firmware upgrade or restarting of the controller?

There are no extra safety precautions necessary. Power distribution and the control over measuring and switching is separated. This means that while updating or restarting the (controller of the) PDUs, power distribution is not interrupted.




See the section "[Power distribution meets intelligence](#)"

## LIFE-SUPPORTING POLICY

The Schleifenbauer PDU has been designed and built for use in data centers. The Intelligent PDU may not be applied in surroundings where a malfunction in the PDU can have consequences for life support systems. Life support systems include any devices designated as "critical" by the U.S. FDA. Such systems are found not only in medical environments such as hospitals, but also on offshore platforms, in petrochemical plants, in air traffic control centers, etc.

# PART IIA - LOCALLY MONITORING: DEVICE DISPLAY

The intelligent PDU features a display with scroll buttons, LEDs and some ports for connecting accessories. Please keep in mind that PDUs may differ in configuration and may not have a display.

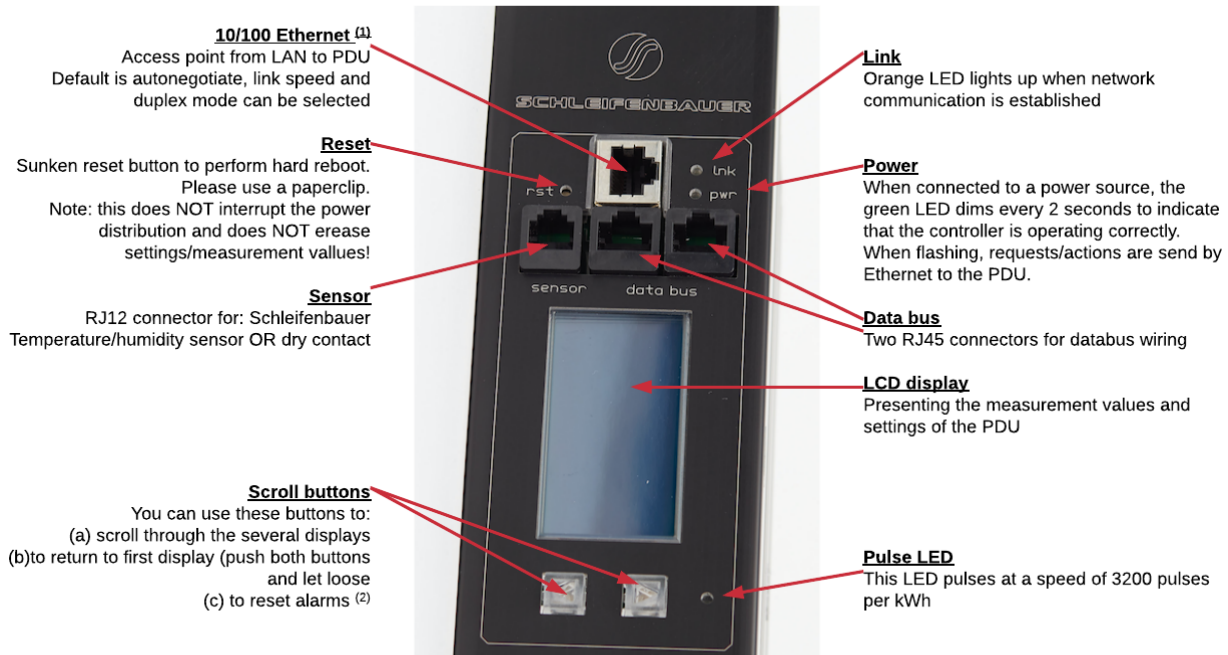

- (1) PDUs **without** an Ethernet port are called Classic PDUs. Firmware for Classic PDUs are in the FW1xxx - range
- (2) This option is called “Local alert reset” and must be activated via the interfaces

## How to change settings locally via PDU display?

Changing settings locally via the PDU itself is **not** possible! You have to use one of the interfaces.



See the [Administrator part](#) of this manual how to changes the settings

## How to stop a blinking display? ... local alert reset

### Why do alerts occur?

Alerts are signal flags after an event occurred. For example, if you measure temperature and the environmental conditions exceeded a configured level - threshold - the PDU will generate an alert. This resolves in:

- SNMP trap
- the screen of the PDU will start blinking.

After the temperature has dropped, the event is cleared but the alert still exists. The display will blink until you “reset” (=clear) the alert.

The LCD display only flashes when an alert is active.

- Actions:
- press any button to stop blinking for a short period: blinking will stop so you can read the display
  - resetting the alert can be done by pressing both scroll buttons simultaneously; when cleared the display will stop blinking (Note: this possibility must be activated on your device; see Admin part of this manual)



Remember: you can reset the alert but by doing so, you do not resolve the cause of the alert!

## How to check the load balance, the temperature / humidity or the status of the NO/NC contact?



In the picture you see 3 phases (L1, 2 and 3). The actual information is given in Amperes but also graphically displayed. The higher the load, the more the bar is filled.

The graphical bar is related to the maximum PDU rating (in the picture it is 32A). There is nearly no load, only on L3 there is a small 0,1A.

DS = status of NO/NC contact [ 0 = open; 1 = closed ]  
Te = temperature [degrees C]  
RH = relative humidity [%]

## How to get back to the first display?



No alerts (= no blinking display) => shortly press both the scroll buttons. You will see the first screen in the display.

If there are alerts, first clear these (see: “[How to stop blinking display? ... local alert reset](#)”) then shortly press both the scroll buttons to jump to the first page

## How to check an outlet status locally?



Note: every row on the display shows the state of 9 outlets. So the first ends with outlet 9, the second row starts with outlet 10

In the “outlets” display you can see how many outlets the PDU has and what their individual state is.

An overview of the possible states:

- 0 = off
- 1 = on
- s = scheduled to go off
- S = scheduled to go on
- p = power cycling

## How to check input and/or outlet measurements?



Example: input page

Note: “Input x” shows the name of the Input. This information can be configured from the Web Interface, Inputs tab or from the other interfaces.

With the scroll buttons you can scroll through the pages. The total amount of pages varies and depends on the configuration of the PDU. For example: the more outlets the higher the total amount of pages.

In the upper example you see that page 4 of 29 is displayed.

In the lower left corner of the displayed page, you see the subject of the shown information. In this example: input measurements of L2.

So, when you search for outlets, you need to scroll through the pages until you reach the “outlet” sections. See lower example



Example: outlet page

Displayed information can be:

- I = current [A]
- P = power [W]
- U = voltage [V]
- Pf = power factor [%] (= real power ÷ apparent power)
- Et = energy total [kW]
- Es = subtotal energy [kW]

## How to read measurements of optional sensors and what options are possible?

### Option 1: load page

Sensors are displayed on the "Load" screen whenever there are less than 3 sensors in use. When adding more sensors, one or more pages are added to the LCD screen to show the sensors readout as shown in the images below:



- DS = status of NO/NC contact [ 0 = open; 1 = closed ]
- Te = temperature [degrees C]
- RH = relative humidity [%]



## Option 2: sensor pages

The sensor measurements are displayed in the following format:

**< channel number > < sensor type > = < value >**

The sensor type is indicated by a letter. The letters are abbreviations for the sensor type as follows:



Example: sensor page 1 of 2



Example: sensor page 2 of 2

### Analog:


T =	temperature	[°C]
H =	humidity	[%]
R =	residual current	[mA]
A =	AC residual current	[mA]
D =	DC residual current	[mA]
B =	Branch residual current	[mA]

### Digital:

I =	dry switch contact
S =	error status
Y =	activity

For all optional sensors see [www.schleifenbauer.eu](http://www.schleifenbauer.eu)

## How to read Branch Residual Current measurements?

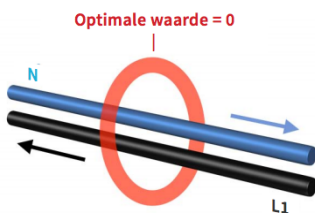

$L1 + L2 + L3 + N > 0 \text{ mA} \dots \text{ THERE MIGHT BE FAULT IN YOUR SYSTEM !}$

When the PDU is equipped with a Residual Current Sensor (RCS), measurements of the residual current are shown in the sensors pages.

(See “Example: sensor pages x of 2” in the previous chapter “Option 2: sensor pages”).

In most parts of Europe, electrical installations must incorporate devices designed to protect people and prevent fires. Most common among these is the residual current device, or RCD for short, which disconnects the circuit if the total for the incoming and outgoing currents in the monitored phases and their neutral conductor does not equal 0.

There is significant potential for this scenario to occur at data centres. One example is when a switching power supply within a computer or network equipment gives up the ghost. This in turn causes the RCD to trip and shut down operations either entirely or for large sections. In view of this, the usual approach at data centres is to avoid RCDs and use continuous monitoring instead. Typically, a suitable residual current monitoring device, of Type A, is used in the main distribution or the sub-distribution system.

Standards define various types of residual current devices. The devices concerned are characterised by the types of currents detected and their tripping behaviour under classes AC, A, F, and B.

By way of example, Type A RCDs only detect alternating currents and pulsating direct currents.

Devices sensitive to all currents, namely Type B ones, are prescribed for environments where inverters or frequency converters are used (such as in the UPS systems found in data centres). The superimposed DC residual currents which may occur during fault scenarios would pre-magnetize or saturate the transducers used in Type A monitoring devices, thereby rendering measurement inaccurate or even impossible.

The residual current monitoring devices which meet the measurement criteria for Type B are based on the principle of using special transducers for measurement purposes and recording even DC currents with real precision



## Residual Current Monitoring vs Residual Current Devices?

Many devices inside a datacenter operate a switching power supply. These power supplies usually leak a bit of energy to the protective earth, so even without failing hardware some residual current will occur.

In order to discriminate a single dangerous fault from a sum of harmless smaller faults, one needs to set up a network of RC-sensors and monitor permanently. RC-monitoring can take place in many forms. The Schleifenbauer RC-sensor offers Class B metering, thus enabling our customers to set-up an RC-monitoring system that prevents dangerous situations inside the datacenter.

## Where to measure residual current?

When monitoring residual current at a single location it is not possible to determine whether the measured value is a sum of many small currents or a single larger (dangerous) one. For that reason it contributes to the safety of the personnel inside a datacentre when residual currents are metered at many points. It makes sense to have one or more RC-sensors inside each PDU. The search of an RC-fault can thus be limited to a single PDU or segment of that PDU.

## How to find unit address, tag, name or location of the PDU?



You will find all customer specific information about the PDU in the “Custom” display.

- Adr = address of this unit on the data bus
- Tag = vanity tag
- Nme = device name
- Loc = location of the device

## How to check the way the PDU is connected to the LAN?



Information screen about how the PDU is connected to the network:

- Lnk = current Ethernet link status of the device
- St = IP status:
  - DHCP: Acquiring/Bound, Static, Static fallback
  - ‘-‘ when there is no link
- IP = IP address of the device
- NM = subnet mask of the device
- GW = IP address of the Gateway or Router
- MAC = MAC address of the device

## How can I check in which mode and with what protocol the PDU is running?



In the “IP Interfaces” display you can find information about the device mode in which the PDU is working:

- Mode = hybrid, data bus, bridge, colocation, ...



See the chapter “[Schleifenbauer data bus: what is it?](#)” in this manual for explanations of the term hybrid, bridge, ...

In the display you can read the status, which protocol and port number is shown for:

- HTTP
- API
- Modbus
- SNMP
- IPMode (IPv4, IPv6 or both)



When there is active communication with the PDU, the interface which is running will turn white. In this example “HTTP”.

## How to check the installed firmware version?



In the “About” display you can find the installed firmware version of the device. In this example it is FW02.33.



It is important that the most recent firmware version is running on the devices. This to ensure good working of the device and data bus. Firmware and service tools can be found on “downloads” page of the Schleifenbauer website

### Software & firmware

Click [here](#) for software & firmware.

## How to check for traceability information ?



In the “About” display you can find information regarding serial number, product information and Schleifenbauer order number.

- ID = unique hardware address of this device’s controller
- SN = serial number (also found on the PDU housing)
- Prt = product identification (also found on the PDU housing)
- Ord = order number for internal Schleifenbauer uses
- Ph = number of phases of this device
- O = total number of outlets on this device
- S = number of switchable outlets on this device.
- M = number of metered and/or switched outlets on this device

# PART IIB - REMOTE OPERATING AND MONITORING: WEB INTERFACE

## INTRODUCTION



Connected devices  
(ONLY FOR BRIDGE MODE)

In the left pane (part of the screen) a list of connected devices in the data bus is shown. Also the data bus management functions can be found in this section such as:

- Scan data bus
- Initialise zero addresses to sequence
- Reset all alerts



Device information

After selecting a connected device, you see measurements/information and get access to the remote operating functions, in the right pane.

The screenshot displays the Schleifenbauer web interface. On the left, a table lists connected devices with columns for 'Position', 'End position', 'Device number', 'Name', 'Type', and 'Location'. The table contains 38 entries. On the right, the 'Selected device: Master device - Demo VFDU' is shown. This section includes a 'System Status' panel with various alerts (OK, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0) and a 'Load' panel with three load indicators (L1, L2, L3) showing 0.00A and 0.00A. Below these are 'Interfaces' settings for network, device mode, watchdog, API, modbus TCP, and SNMP, all of which are enabled.

Connected device ->

<- Device information



There are three window sizes: S for smartphones, M for tablets and L for monitor screens. Size of the shown screen is automatically set to the device you are working on.




Using the web interface means using capacity of the data bus and slowing down the performance of other interfaces. Therefore it is NOT advisable to open too many web interfaces in order to prevent “hammering” the data bus.






Classic PDUs don't have a device type register. That is why some things do not work using SNMP:

- input subtotal reset per phase, not working -> try multiple times, reset is often delayed.
- outlet reboot, not working
- Power (W) and Power (VA), invalid value (0.0)

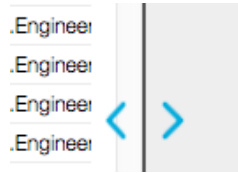
## How to enlarge a pane in L sized screens?



There are two possibilities:

- Using the pane separator: the thin line between < and > sign: 
- Using  or 


## How to select English or German language?

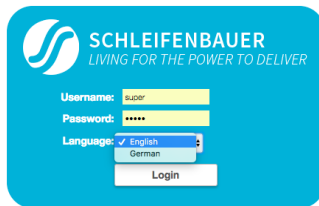

The login screen makes it also possible to select English or German as language

Note: in this manual, only the English screens will be shown.


## How to change and save settings in the web interface?

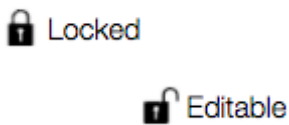

The web interface is protected against accidentally changing settings. Related to your profile, you might have permission to change information: see the “Permission model”. To open protected cells, you first have to click the “Locked” sign and the status will change to “Editable”.

When ready, click “Editable” or click the “Save changes” icon if shown, and the sign will turn into “Locked”.

# DASHBOARD – TAB

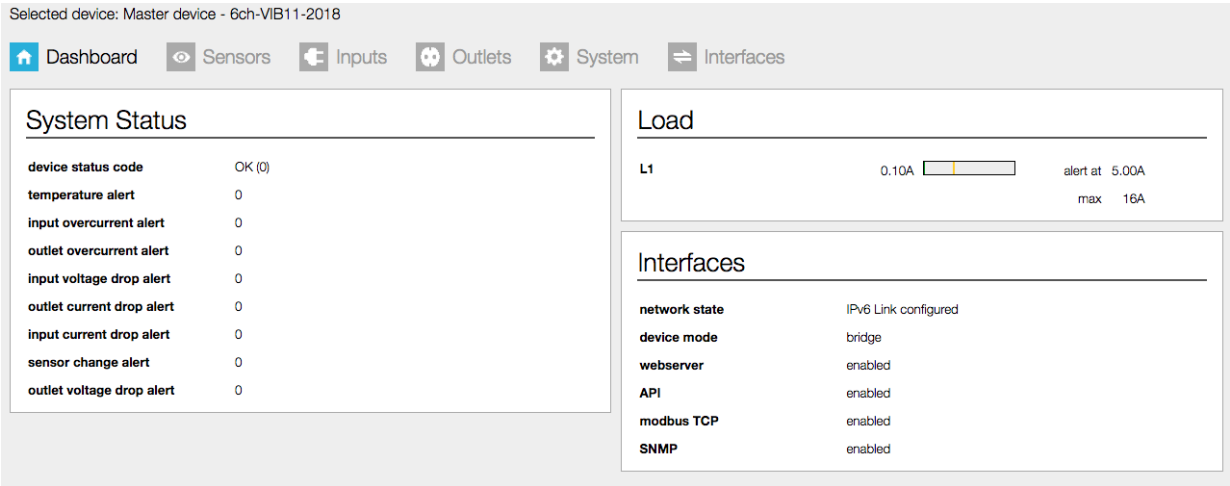


**System status**

### System Status

device status code	Alert flagged (1)
temperature alert	0
input overcurrent alert	0
outlet overcurrent alert	0
input voltage drop alert	0
outlet current drop alert	6
input current drop alert	1






*This section gives you a quick view of the actual status of the PDU: are there any alerts? And if yes, what kind of alerts?*



*The number following after “drops” and “overcurrent” show the OUTLET NUMBER of the last alert. In this example the is an “outlet current drop” at outlet number 6*

*When enabled “Auto reset alert”, alerts will be automatically cleared after the chosen time without active alert conditions.*

Device status code	The code shows the status of the device in terms of errors:	
0 OK	Device status is OK.	
1 Alert flagged	One or more alerts have been flagged. Please check the other alert fields to see the cause of the alert. It can be one of the following sources:	
	<ul style="list-style-type: none"><li>temperature alert</li><li>input current alert</li><li>output current alert</li><li>input voltage alert</li><li>output current drop alert</li><li>input current drop alert</li><li>sensor change alert</li></ul>	
2 Setting(s) initialized	Some settings have been reset to default values. This may occur after a factory reset or a firmware upgrade.	
4 Power-on reset	The device booted after a power loss. It can be one of the following reasons: <ul style="list-style-type: none"><li>because of inserting the PDU power plug (mostly intentional. It can be unintentional if someone removed the power plug accidentally)</li><li>because of a power outage (unintentional),</li><li>because of a defect in the internal power supply.</li></ul>	
8 External reset	The device has been reset by pressing the reset button on the unit.	
16 Watchdog timer	The device rebooted due to an internal error.	
32 Brownout detected	Device rebooted because a voltage drop has been detected. This may indicate a defect in the internal power supply or a dip in external power supply.	
64 Controller error	A hardware error has been detected.	
128 Slave reset	A communication issue has been detected with an outlet slave module.	

temperature alert <sup>(1)</sup>	<p>Temperature alert raises for temperatures, which exceed the user's maximum temperature setting.</p> <p>'0' is the indication of everything's all right.</p>
input overcurrent alert <sup>(1)</sup>	<p>Input current alert raises for inputs/lines/phases, which exceed the user's maximum current setting for that input.</p> <p>In case multiple inputs are in alert state, only the alert which appeared first is shown..</p> <p> 0 = OK, "3" means that there was an input/line/phase current alert at phase 3</p>
outlet overcurrent alert <sup>(1)</sup>	<p>Outlet <b>OVER CURRENT</b> alert raises for outlet number ..n.. .</p> <p>In case multiple outlets are in alert state, the highest outlet will be indicate</p> <p> 0 = OK, "22" means that there was a current drop at outlet "22"</p>
input voltage drop alert <sup>(1)</sup>	<p>This alert raises in case the voltage on an input/line/phase drops below normal operating range, even if the drop is very short.</p> <p>In case multiple inputs are in alert state, only the alert which appeared first is shown.</p> <p> 0 = OK, "3" means that there was an input/line/phase voltage alert at phase 3</p>
outlet current drop alert <sup>(1)</sup>	<p>Outlet drop alert raises for outlet number ..n.. .</p> <p>In case multiple outlets are in alert state, the highest outlet will be indicated.</p> <p> 0 = OK, "22" means that there was a current drop at outlet "22"</p>
input current drop alert <sup>(1)</sup>	<p>Input current drop alert raises due to a sudden current drop for an input. In case multiple inputs are in alert state, the highest input will be indicated.</p> <p>'0' is the indication of everything's all right.</p>
sensor change alert <sup>(1)</sup>	<p>Sensor change alert raises when a sensor type has been changed. If multiple sensor types have been changed the lowest sensor channel will be shown.</p> <p>'0' is the indication of everything's all right.</p>
outlet voltage drop alert <sup>(1)</sup>	<p>Outlet voltage drop alert raises for outlet number ..n.. .</p> <p>In case multiple outlets are in alert state, the highest outlet will be indicated.</p> <p>The threshold is hard coded on 118V.</p> <p> 0 = OK, "22" means that there was a current drop at outlet "22"</p>

(1) For the alert setting please check System Tab > Settings section > Sensor Change Alert.

<div>Load</div> <div><div><div><div><div>Total1-9</div><div>4.52A</div><div><div></div></div></div><div>Out123</div><div>0.66A</div><div><div></div></div></div><div>Out456</div><div>4.17A</div><div><div></div></div></div><div><div>max</div><div>16A</div></div></div> <div><div>alert at 14.00A</div><div>alert at 5.00A</div><div>alert at 14.00A</div></div>	<div>Shows the name, load and alert threshold of each input.</div> <div><div><div></div></div><div>The way loads are visualised depend on the configuration of your PDU</div></div>
<div><div>Load</div><div><div>Total1-9</div><div>Out123</div><div>Out456</div></div></div>	<div>Default, the name has 8 characters. With the “extended name”-option enabled, you can make use of 18 characters</div> <div><div>&gt;</div><div>See also chapter: System tab &gt; Settings</div></div>
<div><div>8.54A</div><div><div></div></div></div>	<div>In a graphical bar the load is presented.</div> <div>As long as the load is under the “alert threshold” the bar will be green</div>
<div><div>0.00A</div><div><div></div></div><div><div>alert at 10.00A</div><div>max 16A</div></div></div>	<div>The alert threshold is visualised as a yellow, horizontal line.</div> <div>The</div> <div><div>&gt;</div><div>See also chapter: System tab &gt; Settings</div></div>
<div><div>17.06A</div><div><div></div></div></div>	<div>However, when the load passes the alert threshold, the bar will turn red. In the meantime 2 things will happen:</div> <div><div>1)</div><div>an alert occurs in the “System status” block</div><div><div>&gt;</div><div>See also chapter: Web Interface &gt; Dashboard tab &gt; System status</div></div><div>2)</div><div>at the same time the display of the PDU will blink</div><div><div>&gt;</div><div>See also chapter: Operating the PDU &gt; Alerts: blinking display</div></div></div>

Interfaces

network state

IPv6 Link configured

device mode

bridge

webserver

enabled

API

enabled

modbus TCP

enabled

SNMP

enabled

Data shown is read-only and gives an overview of the statuses of the interfaces.

!

This block is only shown for devices in BRIDGE mode

# SENSORS – TAB

Sensors 3 total

 Editable

#	name	type	value
1		dry switch contact	0
2	a bit hot today	temperature	36.67 °C
3		humidity	10.96 %

name	Default, the name has 8 characters. With the “extended name”-option enabled, you can make use of 18 characters ➤ See also chapter: System tab > Settings
type	Shows the type of sensor. This is auto detect ➤ See also chapter: Operating the PDU > description of display screens > Sensor page(s)
value	Shows the actual sensor value






## INPUTS – TAB

[Dashboard](#)
[Sensors](#)
[Inputs](#)
[Outlets](#)
[System](#)
[Interfaces](#)
[Logout](#)

Inputs 3 total

Locked

#	name	kWh total	subtotal		power (VA)	power (W)	PF	current	peak current	voltage	min voltage	alert current
1	L1	0	0.000		0	0	100.00	0.00	0.03	229.20	222.35	14.00
2	L2	29	0.044		0	0	100.00	0.00	0.00	229.48	222.64	14.00
3	L3	4	3.313		0	0	100.00	0.00	0.00	229.25	222.43	14.00

#	This indicates the number of input phases. In this example, you see 3 lines because a 3 phase PDU is shown. A single phase PDU will show only 1 line
name	Default, the name has 8 characters. With the “extended name”-option enabled, you can make use of 18 characters. If you are allowed to change the names, depends on your role according to the “permission model” ➤ See also chapter: “web interface > permission model” & “System tab > Settings”
kWh total	Total amount of energy per line: value cannot be reset during the lifetime of the devices!
subtotal / reset	Total amount of energy per line since the last reset. Resetting after “unlocking” and clicking the “reset” button
power [VA]	Apparent power per line
power [W]	Real power per line
PF	Power factor per line [%] = real power [W] / apparent power [VA]
current	Actual current [A] per line
peak current	Highest current per line since the last “reset peaks and dips” ➤ See also chapter: System tab > Reset
voltage	Actual voltage [V] per line
min voltage	Lowest measured voltage (dip) [V] since the last “reset peaks and dips” ➤ See also chapter: System tab > Reset
alert current	Field in which the maximum current [A] is configured for this line, what the actual current is allowed to reach. Crossing this limit will lead to an alert ➤ See also chapter: System tab > Reset & Settings

## OUTLETS – TAB

--	--	--	--	--	--

Outlets 12 total 12 switchable 12 metered <span>Locked</span>													
#	name	kWh total	subtotal	power (VA)	power (W)	PF	current	peak current	voltage	overcurrent alert at	individual delay	power cycle time	state
1		0 0		0	0	100.00	0.00	0.00	230.44	14.00	0	5	on
2		0 0		0	0	100.00	0.00	0.00	230.64	14.00	0	5	on
3		0 0		0	0	100.00	0.00	0.00	231.00	14.00	0	5	on
4		0 0		0	0	100.00	0.00	0.00	227.76	14.00	0	5	on
5		0 0		0	0	100.00	0.00	0.00	228.15	14.00	0	5	on

#	<p>This tab gives an overview of the configuration of the PDU.</p> <p>In this example, there are 18 outlets in total of which 18 are both switchable and metered.</p> <p><i>The example shows only the first 5 lines, in reality the screen shows 18 lines because 18 outlets!</i></p>
name	<p>Default, the name has 8 characters. With the “extended name”-option enabled, you can make use of 18 characters. If you are allowed to change the names, depends on your role according to the “permission model”</p> <p>➤ See also chapter: “web interface &gt; permission model” &amp; “System tab &gt; Settings”</p>
kWh total	Total amount of energy per line: value cannot be reset during the lifetime of the devices!
subtotal / reset	Total amount of energy per line since the last reset. Resetting after “unlocking” and clicking the “reset” button
power [VA]	<p>Apparent power per outlet</p> <p><i>Note: not available on Classic PDU (= without Ethernet port) or DPM27</i></p>
power [W]	<p>Real power per outlet</p> <p><i>Note: not available on Classic PDU (= without Ethernet port) or DPM27</i></p>
PF	Power factor per outlet [%] = real power [W] / apparent power [VA]
current	Actual current [A] per line
peak current	<p>Highest current per line since the last “reset peaks and dips”</p> <p>➤ See also chapter: System tab &gt; Reset</p>
voltage	Actual voltage [V] per outlet
alert current	<p>Field in which the maximum current [A] is configured for this outlet, what the actual current is allowed to reach. Crossing this limit will lead to an alert</p> <p>➤ See also chapter: System tab &gt; Reset &amp; Settings</p>
delay	This functionality makes it possible to switch outlets in a row during startup (if configured). So, one-by-one and not all at once. You can configure the time of switching in seconds.

power cycle time	<p>Configurable downtime when an outlet is power cycled. Which means that after the command to power cycle (shut outlet of and start again) is given, the outlet will be switched on again after the configured downtime has passed.</p> <p>➤ See “Unlock” at the end of this table</p>
state	<p>Shows the configured OR actual outlet statet. There are several possibilities:</p> <div data-bbox="375 407 687 613"> <p>current state</p> <ul style="list-style-type: none"> <li><b>on</b> on</li> <li><b>off</b> off</li> <li><b>son</b> scheduled to switch on</li> <li><b>sof</b> scheduled to switch off</li> <li><b>pc</b> power cycling</li> </ul> </div> <p>➤ See “Unlock” at the end of this table</p> <div data-bbox="359 728 418 779"> </div> <p><i>Devices built up and including January 2018: the displayed outlet state is the user configured state.</i></p> <p><i>For devices built from February 2018 on: the displayed outlet state is the ACTUAL state because of the implementation of 6-channel outlet prints. These prints send information to the controller print about the actual state of the outlets. Depending the “power up/down outlet behaviour” you can see changes in the overview.</i></p>
unlock	<p>After the “unlock” sign is clicked, a confirmation is needed to change the state of the outlet. There are 2 possibilities:</p> <div data-bbox="375 1153 730 1220"> </div> <ul style="list-style-type: none"> <li>• Switch off</li> <li>• Power cycle (See “power cycle time” in this table)</li> </ul> <p>After you have made a choice, the state of the outlet is changing (See “state” in this table) While the given command is running, a status bar shows the progression of the action.</p> <div data-bbox="375 1462 730 1509"> </div>

# SYSTEM – TAB

DashboardSensorsInputsOutletsSystemInterfaces

Identification

firmware version and build244 - 180226PL1470

SPDM version244

sales order number2015-33261

product IDISENHIB3101-002

serial numberSVNL00056485

hardware address17600-6414-0

unit address10

device name5ch-VIB11-2018

device locationdesk floor

vanity tag5ch-VIB11-2018

Configuration

number of phases1

number of outlets12

number of switchable outlets12

number of metered outlets12

maximum load (A)16

number of sensors1

Reset

Restart CPU will not affect any outlet state!

restart CPU

reset alerts

reset peaks and dips

local alert reset allowedyes

auto reset alertoff

Settings

display backlight timeout4 minutes

display orientationhorizontal, display at left side

peak duration (ms)120

current drop detectionboth inputs and outlet(s)

system-wide outlet delay (ms)150

power up/down outlet behaviorno switching on power up

outlet unlock overrideenabled

maximum temperature (°C)50

sensor change alertenabled

extended name supportdisabled


On the next pages the different sections of this tab are described.

Page 28 of 50


V2.44\_User manual Schleifenbauer PDU


Identification	
<div> <div>Identification</div> <div> <div>firmware version and build</div>240 - 161208PL837 <div>SPDM version</div>240 <div>sales order number</div>2015-33693 <div>product ID</div>SSCHVIB1106-001 <div>serial number</div>SVNL00040585 <div>hardware address</div>36176-6129-0 <div>unit address</div>40585 <div>device name</div>PDU Blauw A <div>device location</div>Demorack <div>vanity tag</div>Schleifenbauer </div> <div>Identification and allocation information of the device</div> </div>	
firmware version	Actual firmware version on the device ➤ Please check the website for the latest version: <a href="http://www.schleifenbauer.eu">www.schleifenbauer.eu</a>
SPDM version	The actual version of the Schleifenbauer Products Data Model
sales order number	Reference of initial Schleifenbauer sales order number
product ID	Product identification tag of the device
serial number	Unique, sequential production number
hardware address	Unique MAC-address of the device controller
unit address	Address of the device on the data bus. Number can be between 1 and 65535. (When using Modbus, number can be between 1 and 247)
device name	Configurable device name, which has a maximum of 16 characters <i>Note: this field is not connected with the "extended name support" and always max 16 characters</i>
device location	Configurable location name, which has a maximum of 16 characters <i>Note: this field is not connected with the "extended name support" and always max 16 characters</i>
vanity tag	Configurable vanity tag, which has maximal 20 characters <i>Note: this field is not connected with the "extended name support" and always max 20 characters</i>

<div>Configuration</div> <div> <div>Configuration</div> <div> <div>number of phases</div>3 <div>number of outlets</div>45 <div>number of switchable outlets</div>45 <div>number of metered outlets</div>45 <div>maximum load (A)</div>16 <div>number of sensors</div>1 </div> </div> <div>Configuration information of the device</div>	
number of phases	Number of input phases/lines
number of outlets	Total number of outlets
number of switchable outlets	Total number of switchable outlets
number of metered outlets	Total number of metered outlets
maximum load [A]	Maximum current of the loads
number of sensors	Shows the total number of sensors detected <i>Note: this is autoconfig so after sensors are added or taken out, the system recognizes this and change the information</i>


<div>Reset</div> <div> <div>Reset</div> <div> <div>Restart CPU will not affect any outlet state!</div> <div> <div>restart CPU</div> <div>reset alerts</div> <div>reset peaks and dips</div> <div>local alert reset allowed</div> <div>auto reset alert (s)</div> </div> </div> <div>Restart controller and resetting alerts (manually / automatically)</div> </div>	
restart CPU	This is a reboot of the controller of the PDU. After restarting all alerts and peak registrations will be erased. Be assured: <b>power distribution will NOT BE INTERRUPTED during this restart!</b>
reset alerts	Clears all the alerts on the device. Of course resetting alerts does not mean that the reason of the alert is taken away. So, an alert can occur directly after resetting.
Reset peaks and dips	Clears all the registered peaks and dips on the device.
Local alert reset allowed	Provides possibility to clear alerts while standing next to the PDU by pressing both "Page up" and "Page down" buttons at the same time 

Auto reset alert (s)	<p>In this drop-down menu, you can select how much time it will take to automatically clear alerts after the alert condition disappeared.</p> <p>Be sure that alerts are registered by your management software.</p>	<div> <input checked="" type="checkbox"/> off  1 minute  2 minutes  5 minutes  10 minutes  20 minutes  30 minutes  1 hour  3 hours  6 hours  12 hours </div>
----------------------	--	--

<div> <div>Settings</div> <div> <div>Settings</div> <div> <div>display backlight timeout</div> <div>4 minutes</div> </div> <div> <div>display orientation</div> <div>horizontal, display at left side</div> </div> <div> <div>peak duration (ms)</div> <div>120</div> </div> <div> <div>current drop detection</div> <div>both inputs and outlet(s)</div> </div> <div> <div>system-wide outlet delay (ms)</div> <div>150</div> </div> <div> <div>power up/down outlet behavior</div> <div>no switching on power up</div> </div> <div> <div>outlet unlock override</div> <div>enabled</div> </div> <div> <div>maximum temperature (°C)</div> <div>50</div> </div> <div> <div>sensor change alert</div> <div>enabled</div> </div> <div> <div>extended name support</div> <div>disabled</div> </div> </div> <div>  <p>For devices built from February 2018 and equipped with 6-channel outlet prints have a new feature</p> </div> </div>		
display backlight timeout	Setting for switching off display backlight after certain set time:	<div> <input checked="" type="checkbox"/> 10 seconds  1 minute  2 minutes  4 minutes </div>
display orientation	Setting for the orientation of the LCD display. It can be set as:	<div> no display  vertical, display on top  vertical, upside down  <input checked="" type="checkbox"/> horizontal, display at left side  horizontal, display at right side </div>
peak duration [msec]	Configurable time in milliseconds that a current overload can occur before an alert is given. <i>Note: do not make this time too short because otherwise alerts keep on raising!</i>	
current drop detection	<p>In this drop-down menu, you can select what kind of current drops must be detected.</p> <p>Please note that current drop detection is working in the following way: When the actual current of a channel (can be input or metered outlet) is greater than 0.5A (500mA) and drops with more than 50% of its value, then an input/outlet current drop alert is raised.</p> <p>For example:</p> <ul style="list-style-type: none"> <li>Actual current = 0.4A, drops to 0A -&gt; no alert</li> <li>Actual current = 1A, drops to 0.6A -&gt; no alert</li> <li>Actual current = 1A, drops to 0.4A -&gt; alert is raised</li> </ul>	<div> always off  input(s) only  outputs only  <input checked="" type="checkbox"/> both inputs and outlet(s) </div>

system-wide outlet delay [msec]	Setting for delay time between 2 switch actions in milliseconds. Default value is 100 milliseconds and values below 100 milliseconds are not accepted.
power up/down outlet behaviour	<div data-bbox="491 309 1316 651" data-label="Diagram"> <p style="text-align: center; color: red;">FEBRUARY 2018</p> </div> <p>Auto shut down is standard/default on Schleifenbauer PDUs. This means that when power distribution to the PDU fails, all outlets will shutdown; which of course leads to shut down of connected servers and other equipment .</p> <p>The reason for the auto shut down is is to prevent peak currents damaging equipment when power loss is solved and power distribution restarts. As a customer you are able to set the power up mode of the outlets.</p> <p>Outlet behaviour can be set as:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> no switching on power up <ul style="list-style-type: none"> <li>- <i>at power up, all outlets are kept in the off state</i></li> </ul> </li> <li><input type="checkbox"/> use system-wide outlet delay <ul style="list-style-type: none"> <li>- <i>at power up, all the outlets are set to their last known state by respecting the fixed <u>system-wide</u> outlet delay</i></li> </ul> </li> <li><input type="checkbox"/> use individual outlet delay <ul style="list-style-type: none"> <li>- <i>at power up, all the outlets are set to their last known state, but delayed by the <u>individual</u> outlet delay</i></li> </ul> </li> </ul> <p> For PDU's built from February 2018 and equipped with 6-channel outlet prints, there is an extra option:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> no switching on power down <ul style="list-style-type: none"> <li>- <i>in this state outlets are not turned of on power loss. If you can not select this option, you are using a 9-channel outlet pcb.</i></li> </ul> </li> </ul>
outlet unlock override	<p>Setting for overriding the outlet unlock registers. When this setting is enabled outlets can be switched or power cycled without unlocking them first.</p> <p><i>Note that this makes it easier for the user to switch outlets using SNMP, Modbus and API, but also makes it easier to switch the wrong outlet.</i></p> <p><i>Please keep in mind that this setting isn't valid for the web interface. To be able to make a change through web interface, the relevant part has to be unlocked first.</i></p>



maximum temperature [°C]	Shows the value of the upper limit that the maximum temperature is allowed to reach in degrees Celsius. An alert will be raised if the temperature of any connected temperature sensor exceeds the set value. It can be disabled by setting it to '0'.
sensor change alert	Informs about the change in sensors such as new sensor, disconnected sensor or broken sensor for this device.
extended name support	<p>A feature allowing the use of longer names for inputs, outlets and sensors when viewing the web interface or using SNMP when it is enabled. This setting also affects the names shown on the LCD display.</p> <ul style="list-style-type: none"> <li>• limited to 18 characters</li> <li>• setting is valid for SNMP, the web interface and the LCD display</li> <li>• for API and Modbus, both the original and extended name registers can be used simultaneous and independent of each other.</li> <li>• when the device is configured in bridge mode, all connected devices should support the extended name feature to work properly.</li> </ul> <p> <i>When using both Classic and ethernet PDUs in a databus, the extended name suport may lead to conflicting situations.</i></p>

# INTERFACES – TAB

Dashboard

Sensors

Inputs

Outlets

System

Interfaces

Network Status

network state

IPv6 Link configured

IPv4 address

192.168.9.109

subnet mask

255.255.255.0

gateway

192.168.9.254

MAC address

D0:22:12:B0:7A:FD

hostname

Schleifenbauer\_SVNL00056485

IPv6 link-local address

FE80::D222:12FF:FEB0:7AFD

IPv6 address 1

CAFE::D222:12FF:FEB0:7AFD

IPv6 address 2

::

Access Control

Access control is specified in CIDR notation, IP and prefix bits. Any network client that doesn't match one of these rules will be rejected. These settings are shared for HTTP, SNMP, API, Modbus TCP

0.0.0.0 is replaced with device's active IP. It can be used to limit access to current LAN (0.0.0.0/24)

0.0.0.0/0 can be used to allow all IPs

0.0.0.0/32 can be used to disable a single entry

web client IP

192.168.9.128

allowed IPv4 range 1

192.168.9.128

/32

allowed IPv4 range 2

192.168.9.128

/32

allowed IPv4 range 3

192.168.9.128

/32

allowed IPv6 range 1

::

/0

allowed IPv6 range 2

::

/0

allowed IPv6 range 3

::

/0

Network Configuration

Locked

DHCP & Static IP Settings

Link Speed/Duplex Mode

Autonegotiate

DHCP

enabled

DHCP fallback to static IP

enabled, will fallback to static IP on failure

DHCP fallback delay (s)

10

IPv4 address

192.168.1.220

subnet mask

255.255.255.0

gateway address

192.168.1.1

primary DNS

0.0.0.0

secondary DNS

0.0.0.0

hostname

Schleifenbauer\_SVNL00056485

IP protocol select

IPv4/IPv6 dual-stack

IPv6 address 1

::

IPv6 address 2

::

IPv6 Autoconfigure

enabled

IPv6 fallback to static IP

enabled

Behavior

In colocation mode, some restrictions are applied on data bus access, depending on the variation:

- 'data bus management': data bus can not switch outlets
- 'data bus viewer': data bus can not write, except for identification and firmware upgrade

In colocation mode, firmware upgrades over Ethernet are blocked.

device mode

bridge

The sections of this screen are described in specific manuals. These can be downloaded from our website: [www.schleifenbauer.eu](http://www.schleifenbauer.eu)

Page 34 of 50

V2.44\_User manual Schleifenbauer PDU


# PART III - ADMINISTRATOR MANUAL

## SPECIFIC MANUALS

The specific manuals can be found on our download page: <http://documentation.schleifenbauer.eu/Documentation/>

Subject	Purpose
WebAPI documentation	Describe the WebAPI custom authentication and resource requests
SPDM 2.xx (Schleifenbauer Products Data Model)	List of all registers and their settings. These must be used when the API's
SPBUS_protocol	Provide a concrete and clear description for developers who intend to integrate the SPBUS (Schleifenbauer Products BUS) protocol into their (custom) software solutions.
SPAPI (Schleifenbauer Products application programming interface)	Describe a high-level API for SPBUS devices such that (1) users using the API understand how to use it and (2) developers of any API implementation understand the API's intentions, structure, and design such that they can easily implement, maintain, and extend it where necessary.
APIs tutorial <i>"Getting started with SPBUS"</i>	Guide a developer to one of the SPBUS device interfaces most fit for their purpose.
Modbus	Address scheme, testfile and example can be found on our website

## How to change SNMPv3 settings?

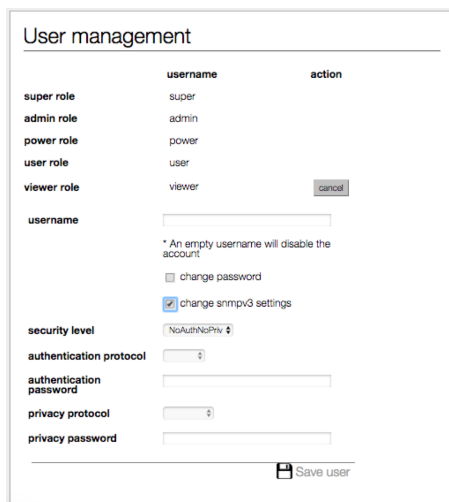

The screenshot shows the 'User management' web interface. On the left, there is a list of roles: super role, admin role, power role, user role, and viewer role. The 'viewer' role is selected, and its details are shown on the right. The 'username' field is empty, and a note states: '\* An empty username will disable the account'. Below this, there are two checkboxes: 'change password' (unchecked) and 'change snmpv3 settings' (checked). The 'security level' is set to 'NoAuthNoPriv'. The 'authentication protocol' is set to 'MD5', and the 'privacy protocol' is set to 'None'. At the bottom right, there is a 'Save user' button.

SNMPv3 user settings can be configured in the web interface: tab “Interfaces”, block “User management”.

To change the settings of a specific user click the ‘edit’ button. Then check the ‘change snmpv3 settings’ checkbox to edit the snmpv3 settings. When finished, click the ‘save user’ button.



Classic PDU, so without ethernet connector and running on firmware 1.xx , don't have a device type register. That is why some things do not work using SNMP

Not working using SNMP on a Classic PDU

- input subtotal reset per phase
- outlet reboot
- Power (W) and Power (VA), invalid value (0.0)

## How to use the ‘connected devices’ section in the web interface?

When the PDU is configured in Bridge mode the web interface will show a list of all devices connected to the bridge-PDU on the left pane (or below the blue header when using narrower displays).

Initially this list is empty but will be filled while the web interface is loading data from the bridge-PDU. A selected device is marked - yellow line - in the device list (left pane). You can switch to another device just by clicking the row in the device list. Information and settings about the currently selected device can be seen on the right pane.

The screenshot shows the Schleifenbauer web interface. The left pane displays a table of connected devices. The right pane shows the 'System Status' and 'Load' information for the selected device.

Position	Unit address	Serial number	Firmware	Name	Tag	Location	C	
1	607	Master device	SNHL000000020010	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
2	10001		SNHL000000020002	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
3	10002		SNHL000000020004	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
4	10003		SNHL000000020006	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
5	10004		SNHL000000020008	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
6	10005		SNHL000000020010	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
7	10006		SNHL000000020012	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
8	10007		SNHL000000020014	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
9	10008		SNHL000000020016	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
10	10009		SNHL000000020018	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
11	10010		SNHL000000020020	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
12	10011		SNHL000000020022	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
13	10012		SNHL000000020024	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
14	10013		SNHL000000020026	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
15	10014		SNHL000000020028	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
16	10015		SNHL000000020030	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
17	10016		SNHL000000020032	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
18	10017		SNHL000000020034	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
19	10018		SNHL000000020036	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
20	10019		SNHL000000020038	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
21	10020		SNHL000000020040	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
22	10021		SNHL000000020042	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
23	10022		SNHL000000020044	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A
24	10023		SNHL000000020046	241	Demo NPOU	Schleif Engineering	Ext. accessible	0 A

## How about login profiles, usernames and passwords?

The PDU user authentication model provides 5 different accounts which can be used to access the web interface and SNMPv3.

In the web interface the user accounts are in decreasing order of access rights: super, admin, power, user and viewer. It should be noted that super is only intended for use by Schleifenbauer personnel. The access rights of the different user accounts, together with data bus and unauthenticated ethernet, are shown in the following table.

	data bus	super / admin	power	user	viewer	eth unauth.
unit address	X	X				X
name, tag, location	X	X				X
import names	X	X				X
outl. & sens. names	X	X	X	X		X
alert settings	X	X	X			X
reset subtotals	X	X	X			X
switching	X	X	X	X		X
reset alerts / restart	X	X	X	X		X
viewing	X	X	X	X	X	X
FW upgrade	X					X
scan (bridge mode)		X				X
change PDU mode		X				
interface settings		X	X			
IP address		X	X			

The default password for each profile initially equals the username of the profile. For example the default password for the ‘admin’ user profile is “admin”.

Each user can change all lesser user passwords, in addition to their own password.

Please fill the ‘User Name’ and ‘Password’ fields accordingly and then click login or press enter.

## How to change factory passwords?



All user profile passwords **MUST** be changed at the first connection by the administrator !

<p>User management</p> <table border="1"><thead><tr><th>super role</th><th>username</th><th>action</th></tr></thead><tbody><tr><td></td><td>super</td><td><input type="button" value="cancel"/></td></tr></tbody></table> <p>username: <input type="text" value="super"/></p> <p><small>* An empty username will disable the account</small></p> <p><input checked="" type="checkbox"/> change password</p> <p>new password: <input type="text"/></p> <p>repeat password: <input type="text"/></p> <p><input type="checkbox"/> change snmpv3 settings</p>	super role	username	action		super	<input type="button" value="cancel"/>	<p>In tab "Interfaces", block "User management" passwords can be changed.</p> <p>There are five login profiles:</p> <ol style="list-style-type: none"><li>1. Viewer = viewing only</li><li>2. User = Viewer + resetting alerts and switching outlets</li><li>3. Power = User + resetting subtotals</li><li>4. Admin = all administrator rights</li></ol> <p>And the "factory profile": 5. Super.</p> <p>Please keep in mind that 'super' user profile should never be used since it allows changing the configuration of PDU.</p>
super role	username	action					
	super	<input type="button" value="cancel"/>					

## How to change the Ethernet link settings?

By default the "ethernet link speed and duplex mode"-setting is set to **autonegotiation**. With this setting the link speed and duplex mode are automatically configured with the link partner (e.g. Network Switch).


You can also configure the link speed and duplex mode to a fixed setting. You can choose from the following options:

- Autonegotiation
- 10 Mbps Full Duplex
- 10 Mbps Half Duplex
- 100 Mbps Full Duplex
- 100 Mbps Half Duplex

Network Configuration 🔒 Editable

---

DHCP & Static IP Settings 💾 Save Changes



Saving these settings will reset Access Control settings.  
Settings will be effective after restart of CPU or replug of ethernet cable.

Link Speed/Duplex Mode Autonegotiate ▾



When changing this setting you must also configure the link partner correctly! Otherwise you will not be able to connect to the PDU remotely.

If this setting is changed in the wrong way and you are not able to connect, change the setting of the link partner to be able to access the PDU again. If this doesn't work you can try a factory reset.

## NETWORK CONFIGURATIONS

### DHCP and default address

In general, the Dynamic Host Configuration Protocol (DHCP) protocol can dynamically configure the:

- IP address
- subnet mask
- gateway address
- Domain Name System (DNS) servers

By default, the PDU is configured to get the IP address from DHCP automatically. If the PDU does not receive an IP address within a set time, it will proceed using the default address:

192.168.1.220  
(subnet mask: 255.255.255.0)

### How to configure the IP settings manually?

The IP settings can be manually configured by using the web interface:

The screenshot displays the Schleifenbauer web interface with the 'Interfaces' tab selected. The 'Network Configuration' section is active, showing 'DHCP & Static IP Settings'. The 'DHCP' option is set to 'disabled'. The 'DHCP fallback to static IP' is 'enabled, will fallback to static IP on failure'. The 'DHCP fallback delay (s)' is set to 60. Under 'Static IP Settings', the 'IP address' is 192.168.9.221, 'subnet mask' is 255.255.255.0, 'gateway address' is 192.168.9.254, 'primary DNS' is 192.168.9.254, 'secondary DNS' is 0.0.0.0, and 'hostname' is Schleifenbauer\_SVNL00. The 'Network Status' section on the left shows the network is 'bound to static IP' with the same IP address and subnet mask. The 'Access Control' section is 'Locked' and shows a 'web client IP' of 92.65.234.94 and an 'allowed IP range 1' of 0.0.0.0 / 0.

- Actions:
- go to the <web interface> , tab < Interface > , block < Network Configuration >
  - disable DHCP
  - Fill in the “Static IP Settings”
  - Restart the CPU: go to tab < System > , block “Reset”



When using ‘DHCP fallback to static IP’, it is recommended to enter a unique IP address for each PDU. This approach prevents all of the PDUs from being assigned the same IP address in the event of a faulty DHCP server.

## How to setup IPv6?

Since firmware version FW2.44, IPv6 support has been introduced in the Schleifenbauer PDU. This feature is disabled by default.

An IPv6 address<sup>1</sup> consists of 8 blocks of 4 hexadecimal digits<sup>2</sup> separated by columns ( : ). Consecutive blocks of zeroes can be substituted with a double column ( :: ) and leading zeroes can be omitted. By default the static IP is ":::" which translates to 0000:0000:0000:0000:0000:0000:0000:0000.

### IPv6 Autoconfigure (SLAAC)

By default the PDU will try to obtain its IPv6 address through a process called "stateless local address auto configuration" (SLAAC). This setting can be turned off in the web interface by setting "IPv6 Autoconfigure" to "disabled".

The PDU will try to find a router by sending router solicitation packets via ICMP6 using its link-local address. This means that a IPv6-enabled router must be available on the network and it must send ICMP6 router advertisement packets in order for the PDU to obtain a valid IP6 address.

When "IPv6 fallback to static IP" is set to enabled in the web interface, the PDU will use it's configured static addresses as fallback when a router cannot be found.

### Static IP

To use static IPv6 addresses the PDU must either have it's "IPv6 Autoconfigure" setting disabled or "IPv6 fallback to static IP" enabled in the web interface.

These settings can be found under "⇌ interfaces → network configuration".

To change the static IPv6 addresses, fill in a valid IPv6 into fields "IP6 address 1" and/or "IP6 address 2" as shown in Image 1.

## How to configure IPv6?

The IPv6 settings can be found in the PDUs web interface under "⇌ interfaces → network configuration". The PDU will always generate a Link-local address which starts with "FE80::". This address is auto-generated and loses its scope at the first encountered network node.<sup>3</sup>

The IP6 addresses can be found on the web interface or on the "IPv6 Link" page on the PDU's built-in LCD screen as shown in Image 2.

To enable it the user must login to the PDU using the ipv4 address presented on the display. After logging in onto the web page<sup>4</sup> of the PDU, select the tab "⇌ interfaces". Under network configuration there's a drop-down box called "IP Protocol select" as seen in Image 1. By default this will be set to "IPv4 only". To enable IPv6 set this to either "IPv6 only" or "IPv4/IPv6 dual-stack".

Note that selecting "IPv4 only" or "IPv6 only" requires one of the filtering ranges to be all zero (allow all addresses). This is to prevent users from locking themselves out. Naturally filtering can be configured afterwards when the user has connected to the bridged and/or hybrid PDU using the protocol previously specified.

---

<sup>1</sup> [https://en.wikipedia.org/wiki/IPv6\\_address](https://en.wikipedia.org/wiki/IPv6_address)

<sup>2</sup> <https://en.wikipedia.org/wiki/Hexadecimal>

<sup>3</sup> [https://en.wikipedia.org/wiki/Link-local\\_address#IPv6](https://en.wikipedia.org/wiki/Link-local_address#IPv6)

<sup>4</sup> See part IIB - Remote operating and monitoring



IP protocol select	IPv4/IPv6 dual-stack	Image 1: ipv6 settings in web interface
IP6 address 1	::	
IP6 address 2	::	
IPv6 Autoconfigure	enabled	
IPv6 fallback to static IP	enabled	

Enabling IPv6 will also add an additional page on the PDUs display: see image 2. The current IP Mode is also displayed on the display; screen "IP INTERFACES".

	Image 2: ipv6 page on PDU display
---	-----------------------------------

## How to set up IPv6 address filtering?

As with IPv4, IPv6 address filtering settings can be found under "⇌ interfaces → network Access control" from within the web interface.

The web interface shown in image 3 will allow you to specify 3 IP ranges which grant access, anything outside of these IP ranges will be blocked. If you wish to configure only a single range, you should fill in this range 3 times.

### All "allowed IP6 range" fields must be filled, in order for the filter(s) to have effect.

Setting any address with prefix "0" will allow any address to access the PDU web interface, SNMP, modbus etc. Setting the address to ":::" (all zero's) and the prefix to a number between 0 and 128, will limit the allowed IP scope to the network the PDU is connected to. Filtering will then

#### Example:

Setting a filter of A76F::D222:12FF:FEB0:F48/64 will allow any address starting with A76F:0000:0000:0000: (A76F::) but other addresses such as A76A::32D4:731B:F17B:6 will be blocked. for more detailed explanation see the wikipedia page on IPv6 subnetting.<sup>5</sup>

<div><div>allowed IPv6 range 1</div><div><input type="text" value="::"/> / 0</div></div> <div><div>allowed IPv6 range 2</div><div><input type="text" value="::"/> / 0</div></div> <div><div>allowed IPv6 range 3</div><div><input type="text" value="::"/> / 0</div></div>	<i>Image 3: IPv6 filtering ranges</i>
<div><div>IPv6 link-local address</div><div>FE80::D222:12FF:FEB0:F48</div></div> <div><div>IPv6 address 1</div><div>AF::D222:12FF:FEB0:F48</div></div> <div><div>IPv6 address 2</div><div>::</div></div>	<i>Image 4: PDUs current IPv6 addresses.</i>

### How to send SNMP Traps with IPv6?

The PDU allows you to set 2 SNMP trap destinations. traps are fired when an alert has been generated within the PDU. These destinations can be found under "⇒ interfaces → SNMP" in the PDU web interface. The "trap destination address" fields can be set to any destination including an IPv4 address (when IPv4 is enabled) and an IPv6 address as seen in Image 5.

<div><div>trap destination address 1</div><div><input type="text" value="AF::2"/></div></div> <div><div>trap destination address 2</div><div><input type="text" value="AF::D256:B4A7"/></div></div>	<i>Image 5: IPv6 traps</i>
---	----------------------------

## FIRMWARE DOWNGRADE / UPGRADE

The development of the PDU firmware is an ongoing process. With every new release not only issues are fixed, but new features appear and the data bus will be more stable and speed will be increased. Not installing the newest firmware means that you do not make use of the latest technology.

Because of the data bus ring, upgrading of all attached devices can be done remotely! During the upgrade process the power distribution will not be interrupted. Our firmware, firmware tools and manual are cost free: both download and in use.

When a Schleifenbauer Gateway is in the data bus you need to upgrade the Gateway firmware first. This firmware can be found on the documentation page of the Schleifenbauer website.

The latest firmware, manual and updater tool can be found on the downloads page of our website [www.schleifenbauer.eu](http://www.schleifenbauer.eu).


<sup>5</sup> [https://en.wikipedia.org/wiki/IPv6\\_subnetting\\_reference](https://en.wikipedia.org/wiki/IPv6_subnetting_reference)

## How to stop the alert signaling? ...auto reset alert

From firmware 2.40 on it will be possible to select a duration time after which the alert will be cleared after the cause of the alert is not present anymore. It will be no longer necessary to clear the alert on the PDU or via an interface after the event which led to an alert is gone

But remember: an alert does not occur without a reason. So it is important that the alerts are recorded/logged in an management system.

## How to upgrade the firmware? ...using SPST

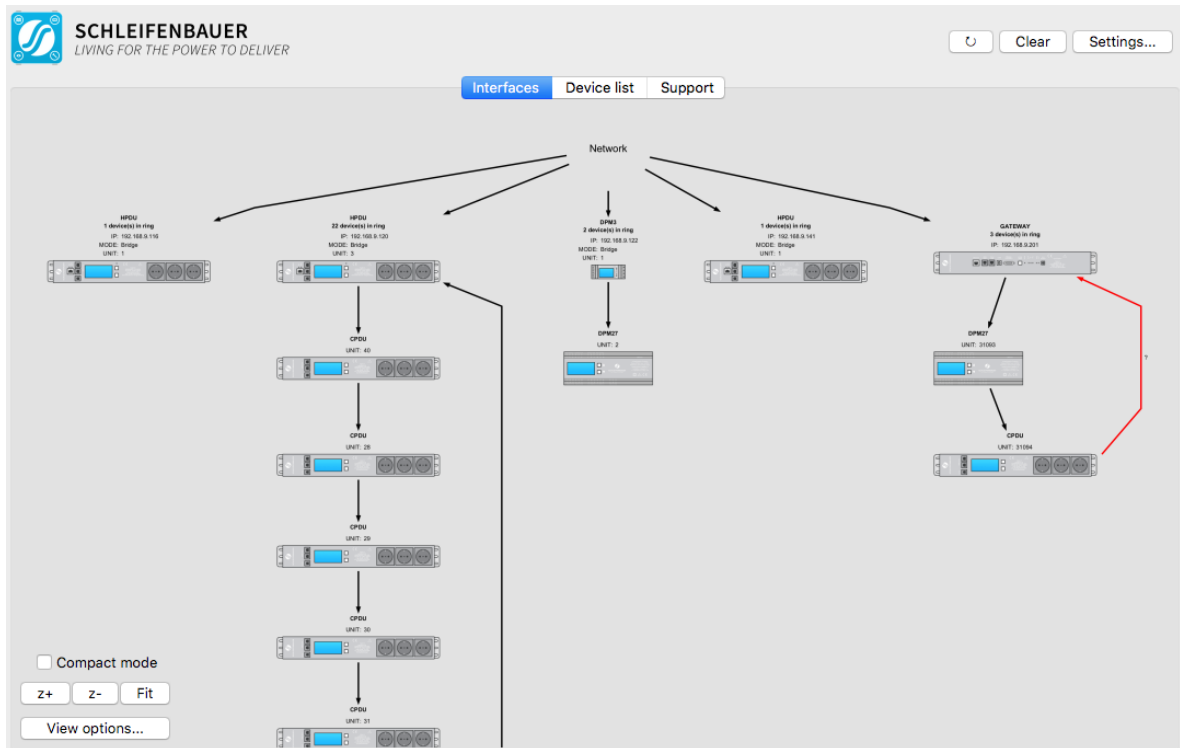

SPST stands for "Schleifenbauer Products Service Tool". This is a program which aims to aid customers in analyzing and maintaining their network of Schleifenbauer PDUs and DPM-energy meters. It does so by offering the following features:



You are able to “quick scan” the status of your databusses



You can upgrade/ downgrade firmware in a very easy and simple way




You can remotely mass configure your databus devices



You will decrease problem solving lead time

You can download SPST from [www.schleifenbauer.eu](http://www.schleifenbauer.eu) where you also can find the SPST-manual. Please read the manual before you start using SPST and you will find out that this tool will make firmware updating and mass configuration a lot easier.

## SCHLEIFENBAUER DATA BUS: WHAT IS IT?

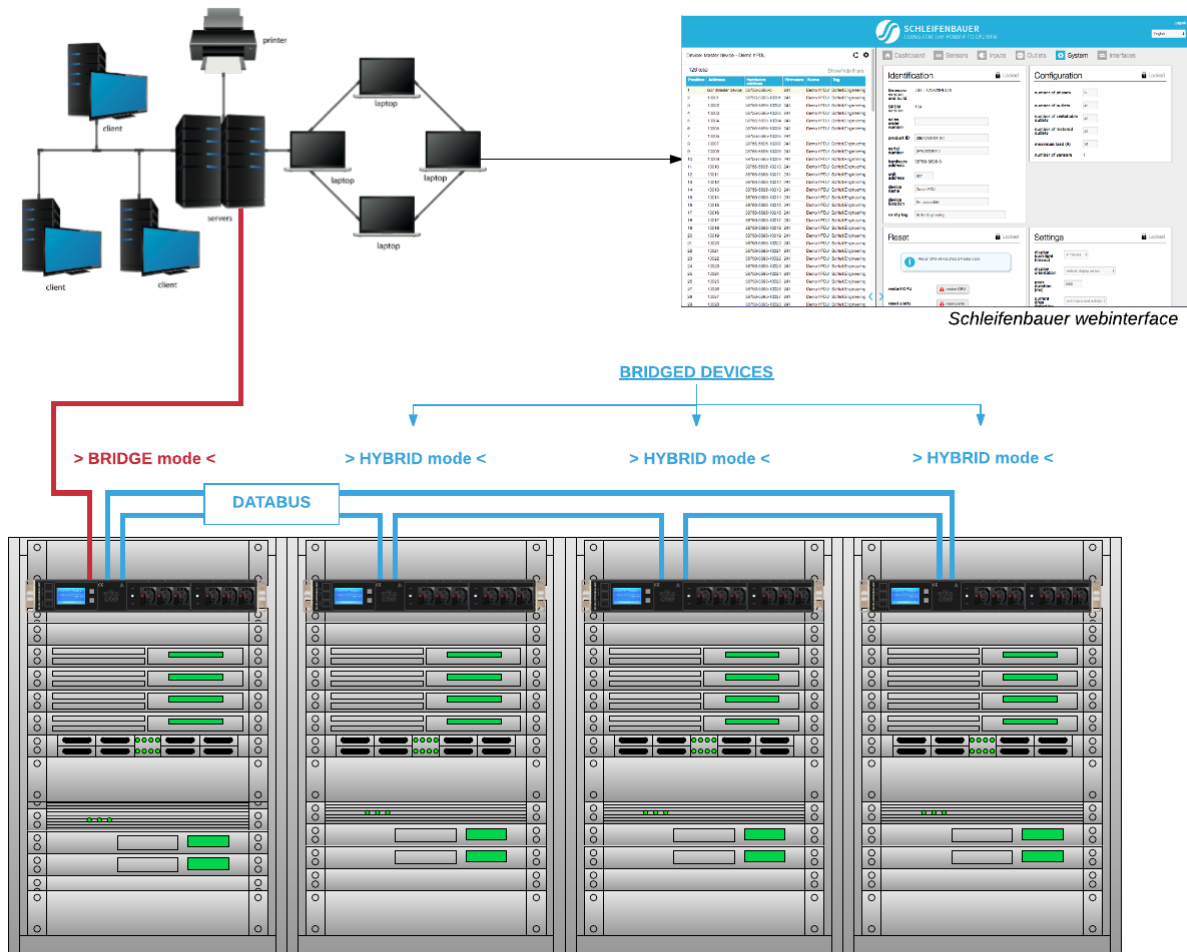

The intelligence of Schleifenbauer PDUs (and DPM energy meters) makes it possible to read and manage devices remotely over IP. You can for example enter the data bus via the web interface, MODBUS and SNMP.

There are all kinds of possibilities using the data bus: whatever configuration you want to build, with the data bus it is possible.

Data bus and power distribution are two separate functions of the Schleifenbauer PDU. This means that all actions done via the data bus do NOT interfere the distribution of power to the IT equipment in the racks.

### Advantages of the data bus:

- easy to build: just pick a PDU and connect it to your LAN, daisy chain the rest of the PDUs and you have made a data bus
- remote updating of the firmware

### Explanation of the figure:

- the PDU/DPM-energy meter that is connected to the LAN must be in “**BRIDGE**” mode; this is the MASTER device
- all “daisy chained” devices must be in “**HYBRID**” mode; these are the followers: the BRIDGED devices

## ***How to prevent data losses because of cable cuts? ...ring redundancy***


Normally the advantage of an IP solution per PDU is that a cable cut will not affect the other PDUs on the bus. This could happen in a normal daisy chained serial bus topology.

However, Schleifenbauer has made their bus redundant so that a single cable cut will not affect the readout or control of the PDUs; it will try and get access via the alternative route on the ring. A cable cut is detected by our firmware and an error message will be submitted to the database. The disadvantage of a serial bus topology is therefore covered in the Schleifenbauer system.



See Part I “How to connect a data bus” on the PDU

## How to make a data bus using Schleifenbauer Gateway?

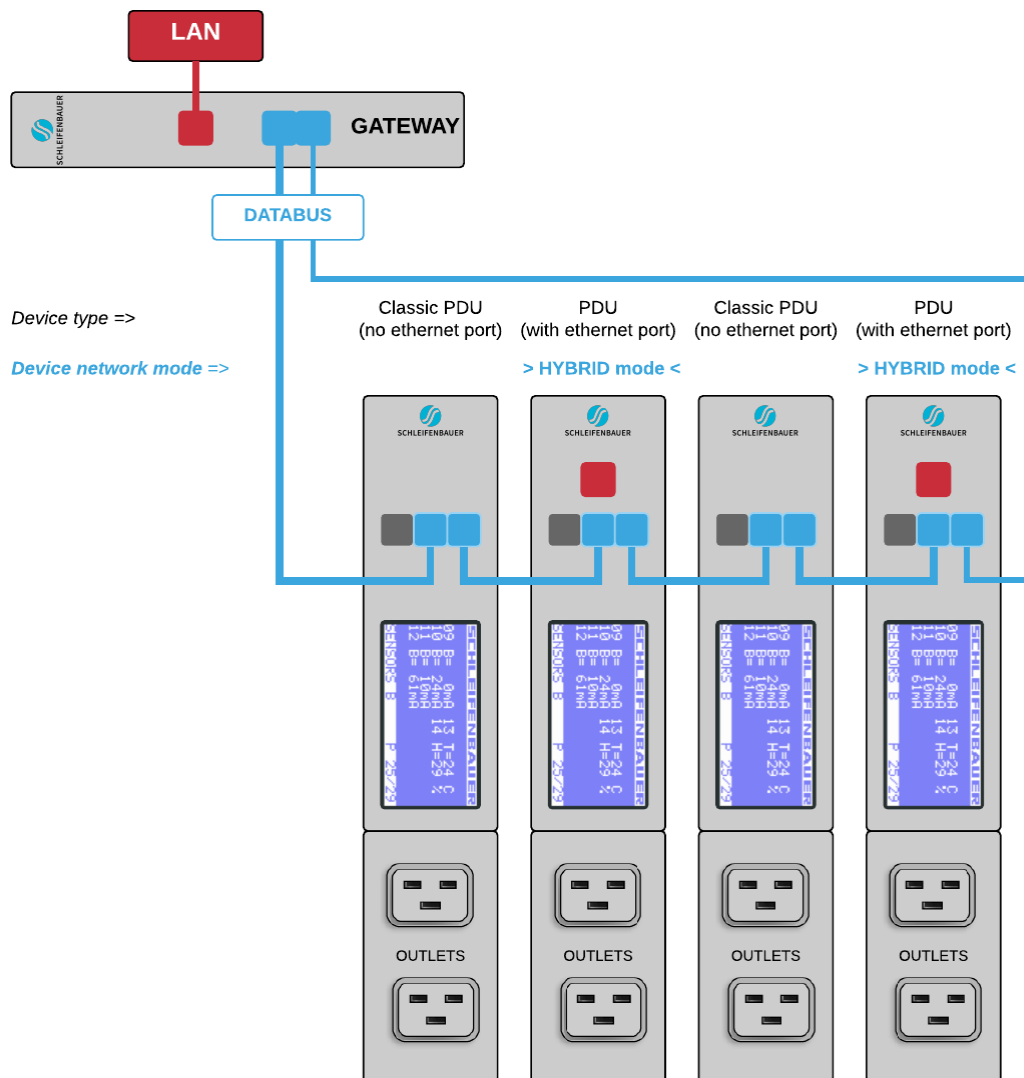

In the figure above you see a small data bus-ring with four PDUs connected to the Schleifenbauer Gateway. The Classic PDU has NO ethernet port, so a (Schleifenbauer) Gateway is needed in order to get PDUs connected to your LAN.

The sequence of devices does not affect the performance of the Gateway or the data bus. Though the more devices you place in the data bus, the slower data transmission will be.

It is advised to close your data bus-ring. To do so, you connect the last device in the data bus also to the Gateway (blue lines in the figure). In a closed data bus ring the Gateway can reach all connected devices via IN and OUT data bus-ports (clockwise and anti-clockwise).

**Advantage:** with one IP-address you can collect data from a number of connected Schleifenbauer-devices (not only PDUs but also the Schleifenbauer DPM-range (=energy meters))


**Disadvantage:** Gateway uses 1U

**Problem solving:** when the Gateway fails, you can change to the next configuration: using the “bridge” mode



Data bus communication is 0,2 seconds per query (e.g. input measures block). Therefore we advice to make rings with a maximum of 50 devices which means that querying each device once will last appr. 10 seconds

## How to connect the data bus to LAN without a Gateway? ...using a PDU!

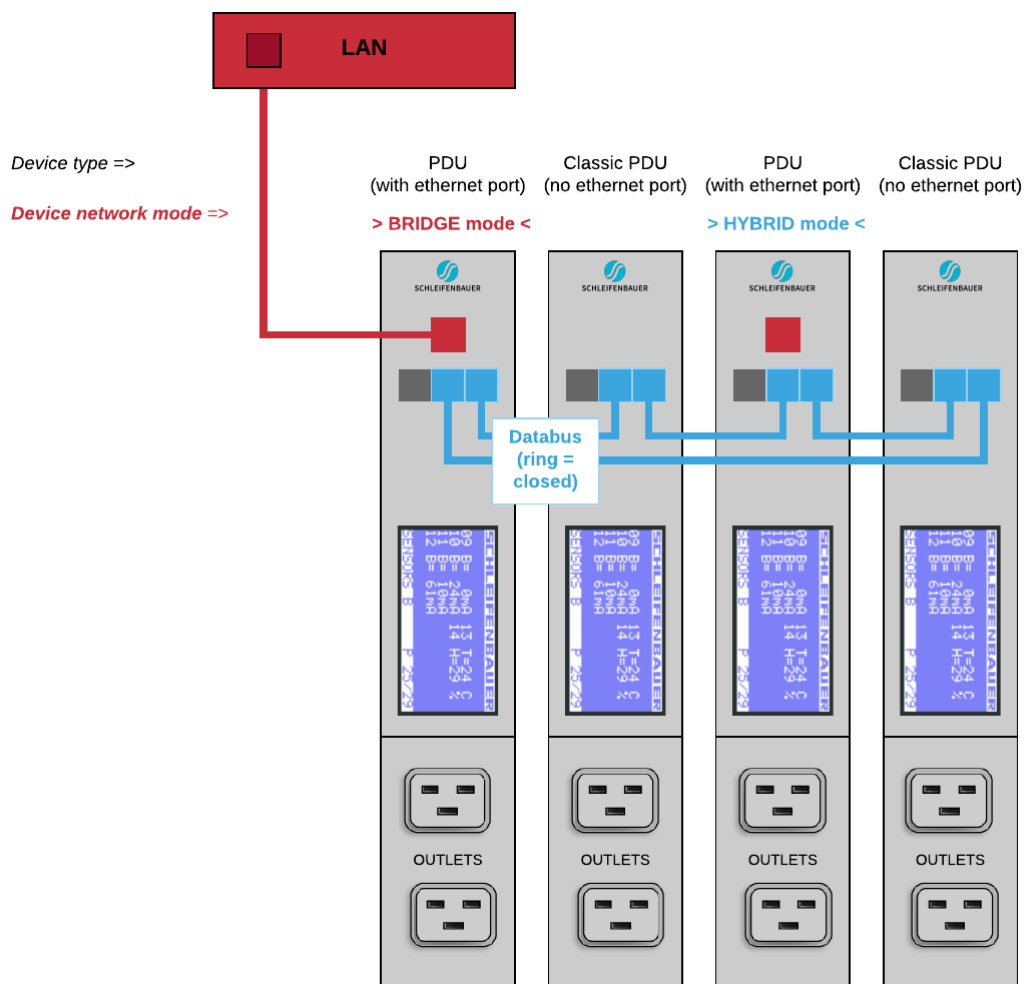

In the figure you see a small data bus-ring with only four devices connected to a LAN: a Classic PDU and PDU with ethernet port. The device connected to the LAN must have an ethernet port and be in "BRIDGE" mode. All other devices should be in "Hybrid" mode. The BRIDGED device takes over the function of the Schleifenbauer Gateway.

You can connect numerous of Schleifenbauer devices to the device which is in BRIDGE mode: PDUs and DPM3's (= 3 channel energy meter) as well as Classic PDUs and DPM27 (= 27 channel energy meter). The sequence of devices does not affect the performance of the data bus-ring. But, the more devices you place in the data bus-ring, the slower data transmission will be. The scheme shows that you can use different kind of Schleifenbauer devices in a ring which makes the system easily scalable to your needs. It is advised to close your data bus ring. So it is best to connect the last device in

the data bus to the device which is in BRIDGE-mode. In a closed data bus ring you can reach all connected devices via IN and OUT data bus ports (clockwise and anti-clockwise).

**Advantages:** (1) when only using devices with ethernet port: only the device in BRIDGE mode uses one IP-address. (2) you can select any device connected to your LAN as long as you place it in BRIDGE mode, (3) investment in a Schleifenbauer Gateway is not necessary, (4) the system is easily scalable

**Disadvantage:** MySQL can not be used




Data bus communication is 0,2 seconds per query (e.g. input measures block). Therefore we advice to make rings with a maximum of 50 devices which means that querying each device once will last appr. 10 seconds

## PART IV - PROBLEM SOLVING

### *How to perform a “Software reset”? And why?*

When Interface-settings are changed the CPU has to be started. In the webinterface a pop up will appear when needed:

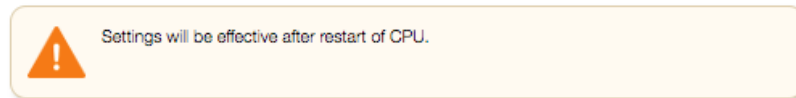

#### *Remotely*

Software reset can be done via the web interface. It is important to understand that a software reset has no impact on power distribution of the PDU. So a reset can be performed at any time without having to interrupt the power supply and without losing the settings in the PDU.

#### *Locally*

The software can be reset using a paperclip or some other kind of thin and rigid rod to press the reset button. This button is mounted behind the hole labelled as 'rst' on the PDU which is next to the Ethernet connection port.

### *How to perform a “Factory reset”?*

If the PDU can no longer be accessed via the LAN, for example, because settings have been changed, restoring IP access may be needed. The following procedure causes the PDU to adopt various default values, which allows it to be detected on the network again without losing any of the other settings in the PDU. However, the power supply must be interrupted in order to perform this restore procedure! The procedure is described in five steps:

1. Interrupt the power supply to the PDU.
2. Restore the power supply.
3. Wait for one second and afterwards press the reset button using a paper clip.
4. Wait for a further second and press the reset button again.
5. Wait for a further second and press the reset button again.

The PDU has now adopted the default values for the IP settings. The access control fields and the web server settings have also been returned to the standard values.

Please note that because the power is removed, outlets will also be out of power. Hence, during this process there won't be any measuring.

Please keep in mind that kWh totals will **NOT** be reset during this process.



## How to reset peak current?.....and other dips or peaks

Example: you have set the “overcurrent alert at” on 5.00A in the < input > tab. At a certain moment you see an alert in the webinterface dashboard. You check the Inputs-tab and see a peak current of 8.30A:

peak current	voltage	min voltage	overcurrent alert at
8.30	228.93	222.26	5.00

You can clear the alert as you already know locally or by the reset button in the <Reset> block in the System-tab but the peak current will not be cleared. You have to do this by clicking the <reset peaks and dips> button in the <Reset> block of the System-tab:

**reset peaks and dips**



# RECYCLING

Schleifenbauer Products aims to be a socially responsible corporation. Therefore, it makes great effort to minimise the impact of our products to our planet during production as well as during operation. Packaging consists of recyclable materials and Schleifenbauer asks you to save them for later use or dispose them with applicable regulations.

# PRODUCT SPECIFICATIONS

	OPERATING
Temperature	0° to 60° Celsius
Height	-30 to +2000 m
Relative humidity	10 to 90% NC
Level of pollution	2
Environment	Indoors IP20
Installation category	II
Protective rating	II
Conditions of use	Continuous

Voltage:	single-phase 100-230 VAC; three-phase 230/400 VAC
Frequency:	50/60 Hz
Permitted load:	see product information on your PDU
Accuracy:	EN 50470-1/3 class B EN 62053-21: class 1, $\pm 1\%$
Wire colour code:	L1 = BROWN L2 = BLACK L3 = GREY N (neutral) = BLUE PE = YELLOW/GREEN

# SERVICE AND SUPPORT

In case you have any questions regarding our products, please contact us from the following addresses:

T:	+31 73 5230256
F:	+31 73 5212383
E-mail:	<a href="mailto:support@schleifenbauer.eu">support@schleifenbauer.eu</a>
Website:	<a href="http://schleifenbauer.eu/en">http://schleifenbauer.eu/en</a>

When an email is sent, a case is created automatically with a unique case number. The request will be investigated in detail and proper actions will be taken. Correspondence about the case will be done with the unique number as reference.

© Schleifenbauer is a registered trademark.  
This publication is protected by copyright.  
No part of it may be reproduced or transmitted in any form,  
without prior consent in writing from Schleifenbauer Products BV.